


What's in the Box

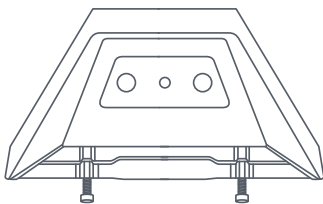

Mobility Mount



Screw Driver



Bolts  
4x



Lag Screws  
4x




Nyloc Nuts  
4x



Sealing Washers  
4x

Recommended Tools

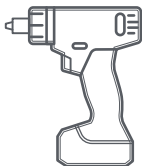

Drill / Impact Driver



Drill Bit  
5 mm (3/16 in)



Drill Bit  
9 mm (3/8 in)





Wrench  
14 mm



Wrench  
13 mm




Pen

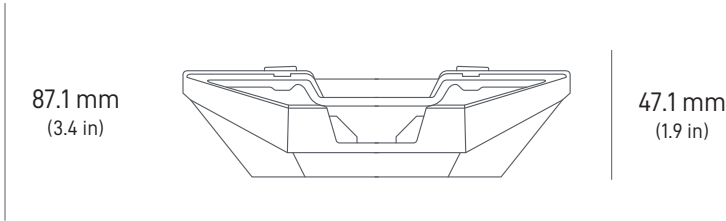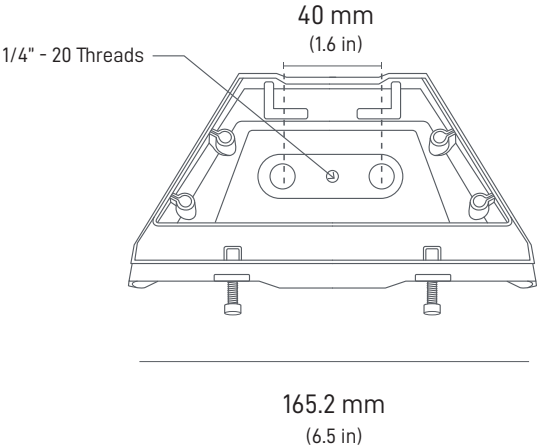

## SCREW INSTALLATION

### 1 | Download the Starlink App


Scan the QR code to download the Starlink App.

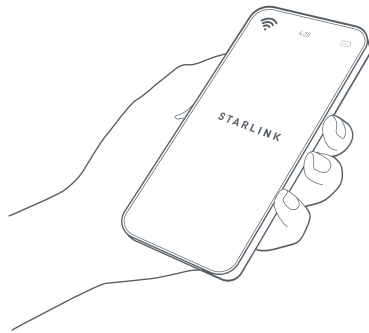

### 2 | Find Mounting Location


Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overhead. Objects that obstruct the connection between your Starlink and the satellite will cause service interruptions. Use the obstructions tool in your App to ensure you have selected a suitable mounting location.

You will also want to ensure your Starlink is mounted in the correct orientation relative to your vehicle as shown below.

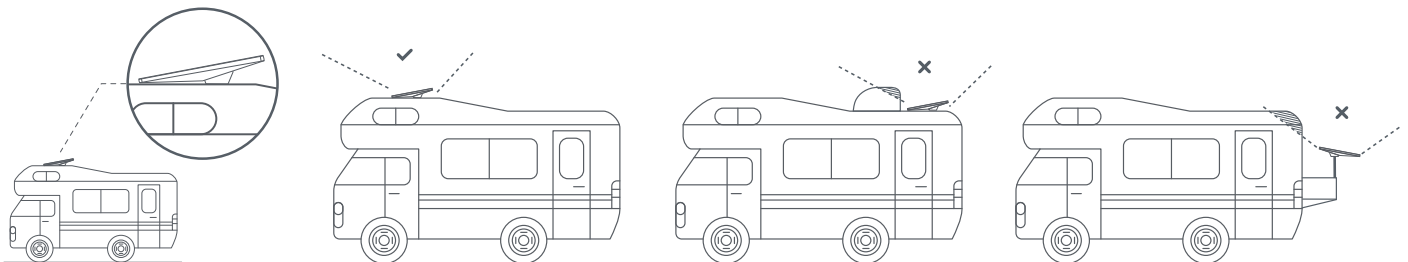

### 3 | Remove Kickstand

Squeeze the release tab and pull it away from its fixed location.

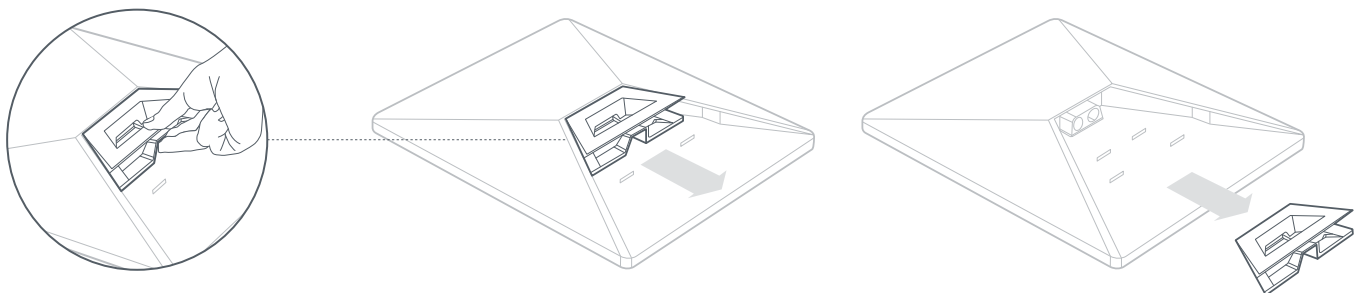


## SCREW INSTALLATION

### 4 | Mark the Pilot Holes


Identify the installation location on your vehicle and mark the location of the 2 holes on your mobility mount using a pen or pencil.

A mounting surface of at least 1.0in thick is recommended.

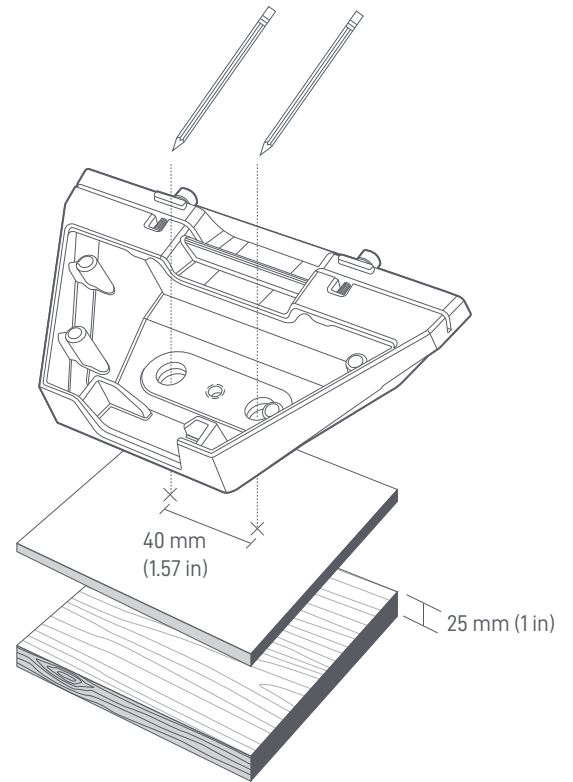

### 5 | Drill the Pilot Holes

Drill the holes with a 5 mm (3/16 in) drill bit.

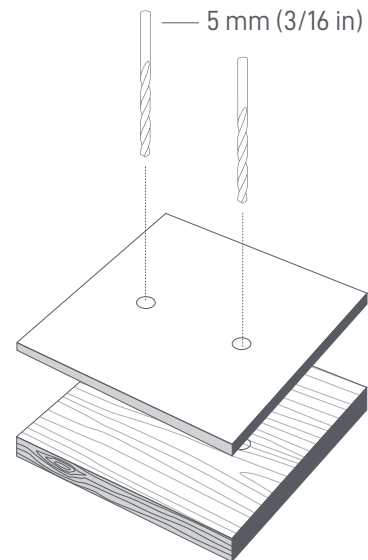


## SCREW INSTALLATION

### 6 | Screw Mount to Surface


Install a washer on the end of each screw and secure the mount to surface.

Using a 13mm (1/2 in) deep-welled socket is recommended.

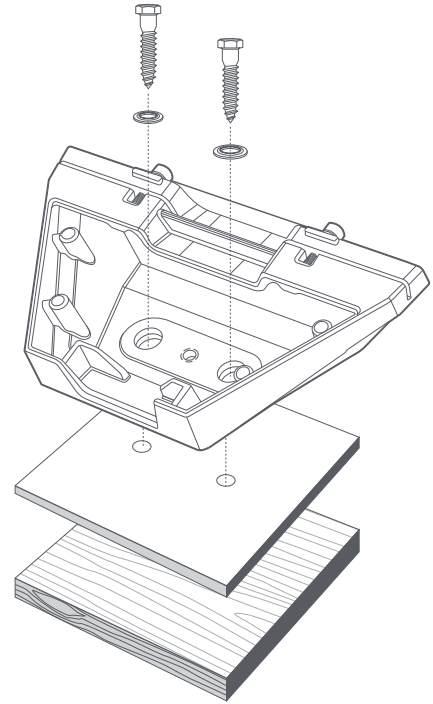

### 7 | Route Cable Through Mobility Mount



Route the power cable through the opening in the mobility mount and out the front end.

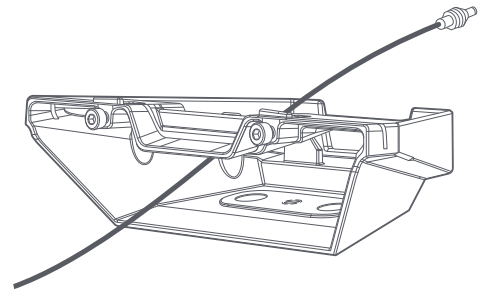

### 8 | Plug in Cable and Install Starlink

Plug the power cable into your Starlink and ensure the cable is fully inserted.


Slide your Starlink into the mount until it clicks into place.

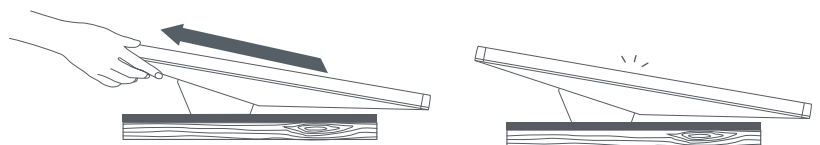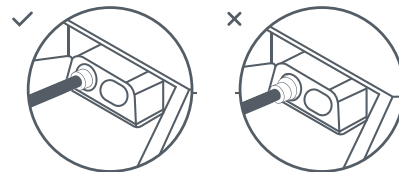

## SCREW INSTALLATION

### 9 | Secure Mount

Using the screwdriver, drive in the two locking screws until hand tight.

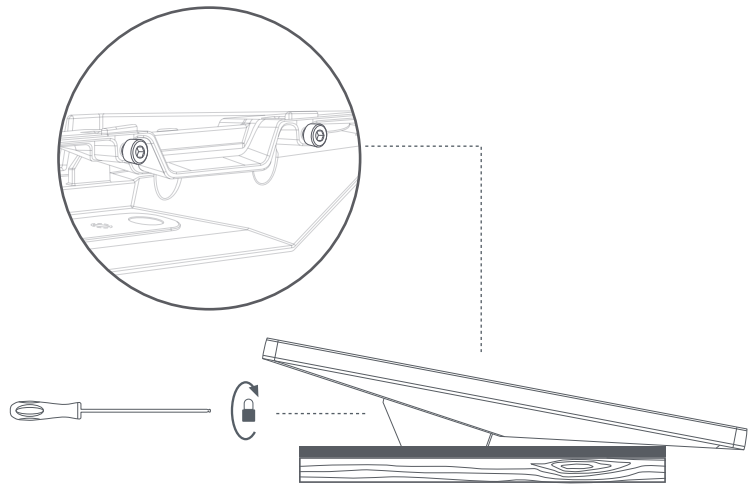

## INSTALLATION CONDITIONS

⚠️**CAUTION!** If you are uncomfortable with any part of the installation process, do not attempt - contact a professional to install your Starlink. Starlink is not responsible for injury or damage to property caused by the installation process.

### Kit Installation for Use on Moving Vehicles.

⚠️**CAUTION!** Take extra care if installing a Starlink for being used on a moving vehicle or vessel. Ensure that the mount is installed firmly on a structurally sound, horizontal surface away from other equipment to give your Starlink a clear view of the sky. Equipment falling off the vehicle due to poor installation practices can cause serious accidents resulting in bodily injury, do not mount the Starlink on any vehicle or vessel if the mount structure is not stable, or if it cannot be properly secured as described in this guide. Ensure the installation on vehicle or vessel is compliant with local Department of Transportation or maritime regulations.

⚠️**WARNING!** Mounts are not designed for high winds, hurricane or tornado wind loads. Tethering should be used in all cases to prevent failure in an unexpected wind event. See installation instructions before connecting this equipment to the input supply.


⚠️**WARNING!** To avoid personal injury and/or damage to the property when drilling, take caution and follow basic safety procedures, including:

- Wear appropriate eye, hand, and face protection.
- Avoid studs, electrical wiring, and water lines when drilling. Drilling into any of these can lead to fire, shock, injury, or death.
- Drill at a slight downward angle from the home interior to the home exterior and thoroughly apply sealant. Improper drilling and sealing may lead to water and/or bug intrusion and/or damage.

## BOLT INSTALLATION

### 1 | Download the Starlink App


Scan the QR code to download the Starlink App.

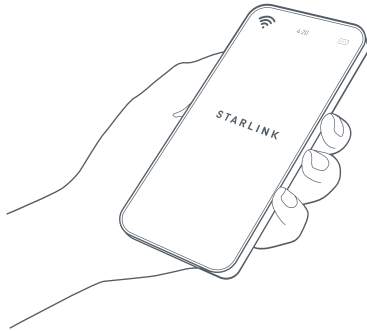

### 2 | Find Mounting Location


Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overhead. Objects that obstruct the connection between your Starlink and the satellite will cause service interruptions. Use the obstructions tool in your App to ensure you have selected a suitable mounting location.

You will also want to ensure your Starlink is mounted in the correct orientation relative to your vehicle as shown below.

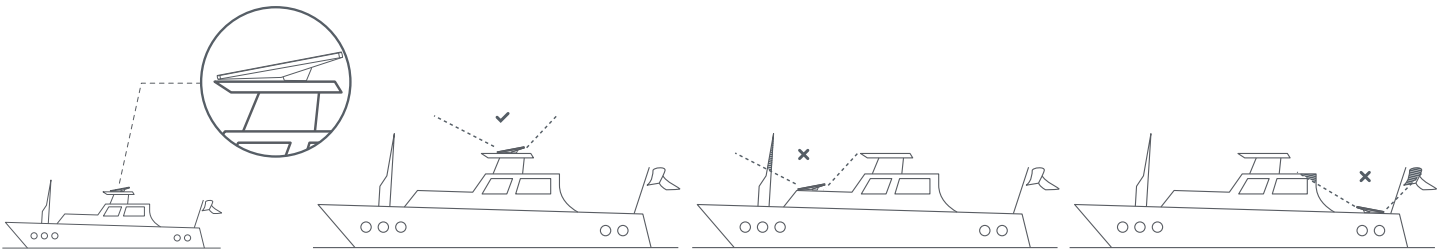


### 3 | Remove Kickstand

Squeeze the release tab and pull it away from its fixed location.

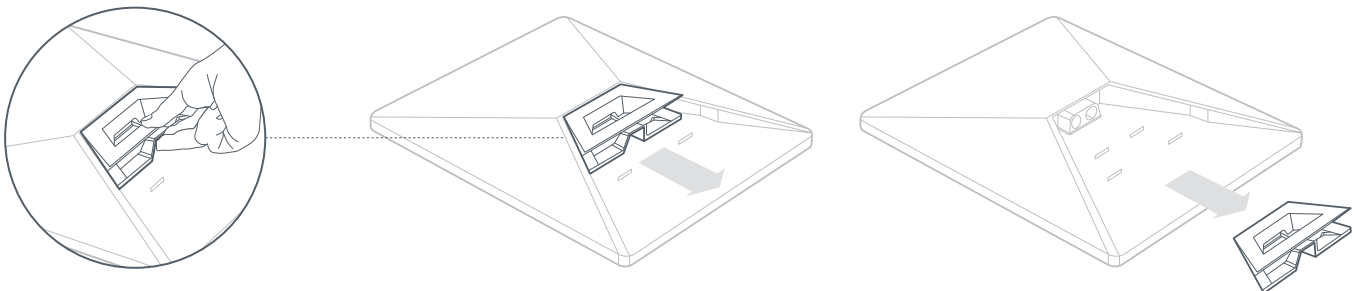


**BOLT INSTALLATION****4 | Mark through Holes**

Identify the installation location on your vehicle and mark the location of the 2 holes on your mobility mount using a pen or pencil.

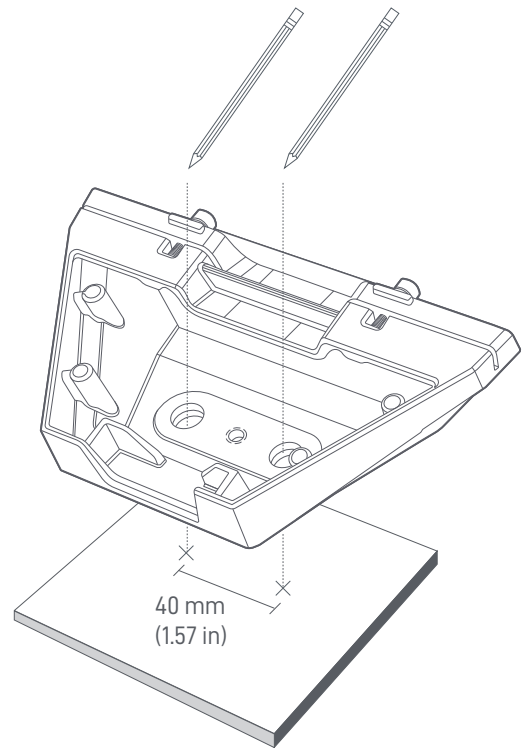**5 | Drill through Holes**

Drill the holes with a 9 mm (3/8 in) drill bit.

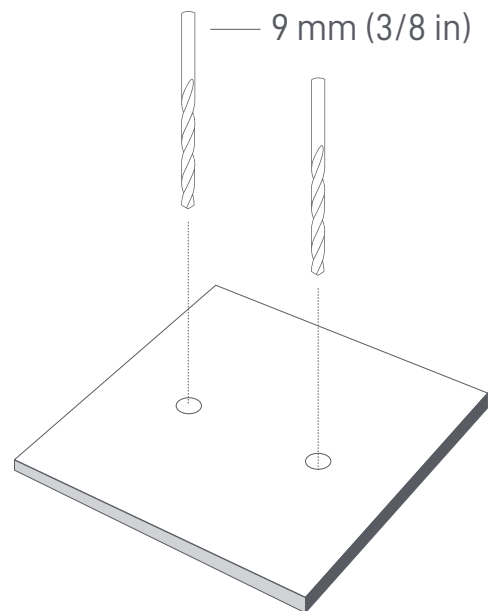


## BOLT INSTALLATION

### 6 | Secure Mount to Surface


Install a washer on the end of each bolt and insert bolts through the mount and pre-drilled holes. Install a nut on the end of each bolt and secure the mount to surface.

Using a 14 mm deep-welled socket is recommended.

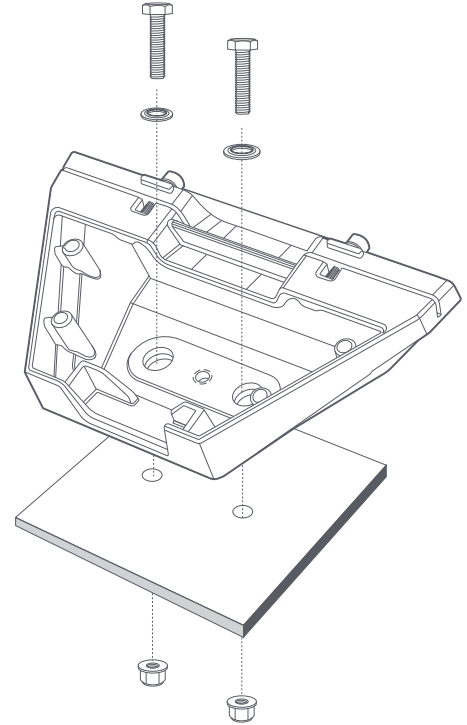

### 7 | Route Cable Through Mobility Mount



Route the power cable through the opening in the mobility mount and out the front end.

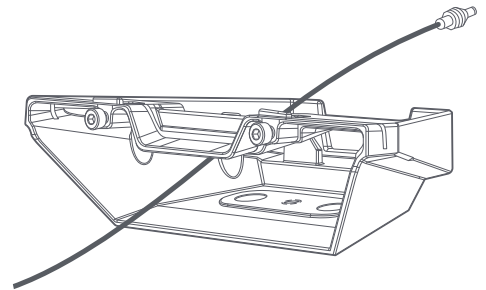

### 8 | Plug in Cable and Install Starlink

Plug the power cable into your Starlink and ensure the cable is fully inserted.


Slide your Starlink into the mount until it clicks into place.

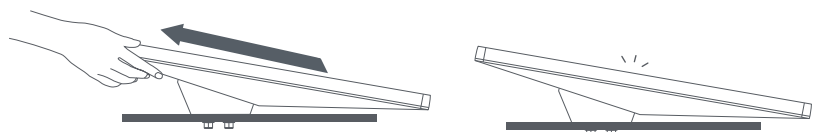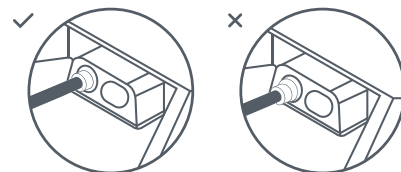

## BOLT INSTALLATION

### 9 | Secure Mount

Using the screwdriver, drive in the two locking screws until hand tight.

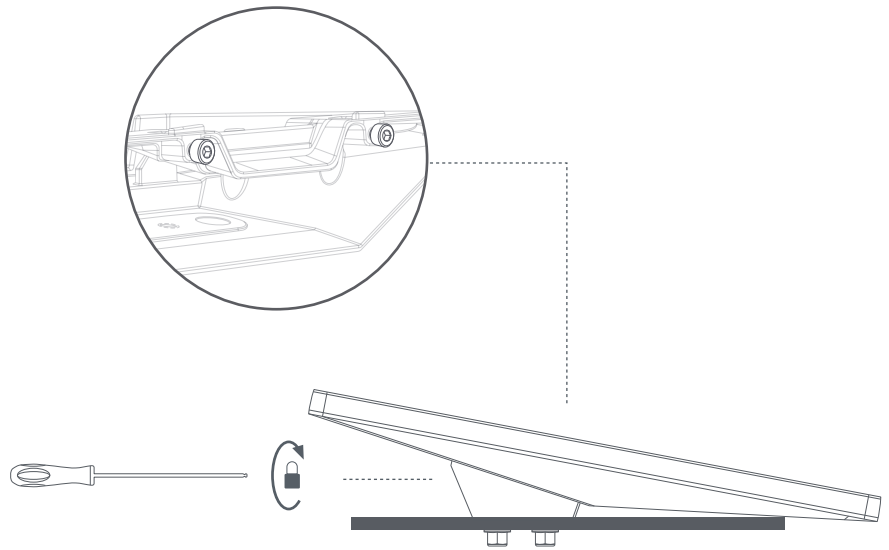

## INSTALLATION CONDITIONS

⚠️**CAUTION!** If you are uncomfortable with any part of the installation process, do not attempt - contact a professional to install your Starlink. Starlink is not responsible for injury or damage to property caused by the installation process.

### Kit Installation for Use on Moving Vehicles.

⚠️**CAUTION!** Take extra care if installing a Starlink for being used on a moving vehicle or vessel. Ensure that the mount is installed firmly on a structurally sound, horizontal surface away from other equipment to give your Starlink a clear view of the sky. Equipment falling off the vehicle due to poor installation practices can cause serious accidents resulting in bodily injury, do not mount the Starlink on any vehicle or vessel if the mount structure is not stable, or if it cannot be properly secured as described in this guide. Ensure the installation on vehicle or vessel is compliant with local Department of Transportation or maritime regulations.

⚠️**WARNING!** Mounts are not designed for high winds, hurricane or tornado wind loads. Tethering should be used in all cases to prevent failure in an unexpected wind event. See installation instructions before connecting this equipment to the input supply.

⚠️**WARNING!** To avoid personal injury and/or damage to the property when drilling, take caution and follow basic safety procedures, including:

- Wear appropriate eye, hand, and face protection.
- Avoid studs, electrical wiring, and water lines when drilling. Drilling into any of these can lead to fire, shock, injury, or death.
- Drill at a slight downward angle from the home interior to the home exterior and thoroughly apply sealant. Improper drilling and sealing may lead to water and/or bug intrusion and/or damage.